



# Windows & Doors

## STANDARD WINDOWS

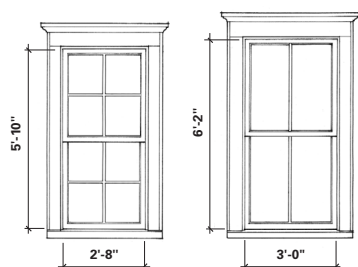


Second floor



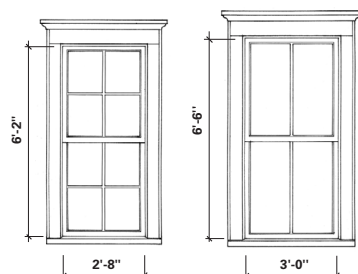


First floor

## SPECIAL WINDOWS

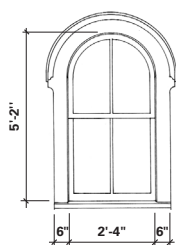


## DORMER WINDOW

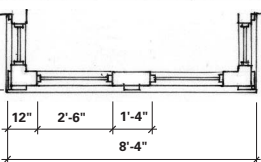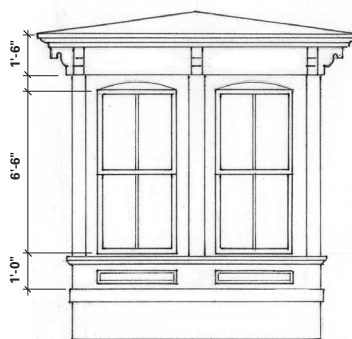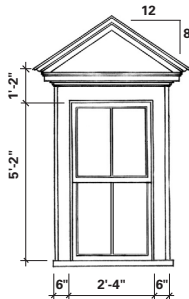

Box bay window

## TYPICAL WINDOW DETAIL

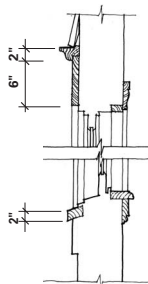

Flat trim



## Windows

Windows are vertical in proportion and have a 2 over 2 or 4 over 4 muntin pattern. Panes are always taller than they are wide. Some houses may have windows with rounded upper sashes. Standard windows are double hung.

## Special Windows

Norfolk Victorian houses feature round-top windows, dormers and box and angled bay windows. Bay windows must project a minimum of 8 inches from the main structure. Bay windows have a continuous base to the ground; two-story bays are common.

## Doors

Doors on Norfolk Victorian houses are vertical in proportion. The maximum width of a pair of double doors is 5 feet for doors at least 8 feet tall, and 4 feet for shorter pairs of double doors.

## Trim

Windows and doors have 6-inch trim with a simple backband profile. Victorian window and door trim carries a decorative crown and cap above; windows may feature an ornate hood.

## DOORS

